

Инструменты



 
Карандаш



Сверло



Силикон



Отвертка



 
Рулетка



уровень



Дрель



МОЛОТОК

Комплектующие



 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
 
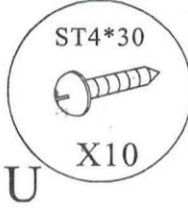 



Схема сборки

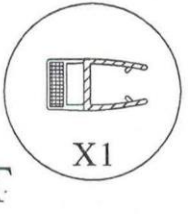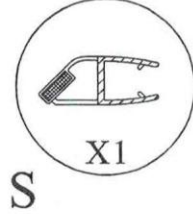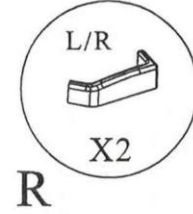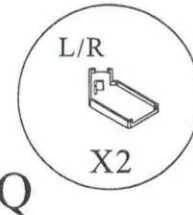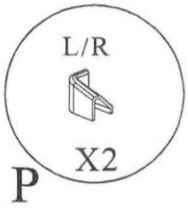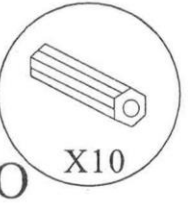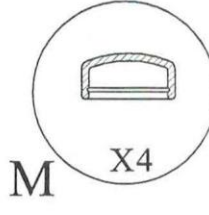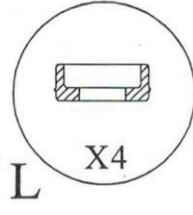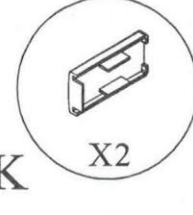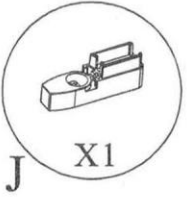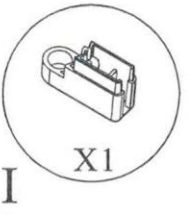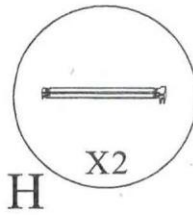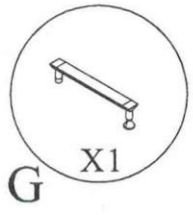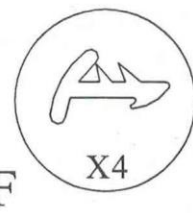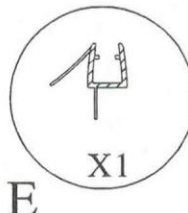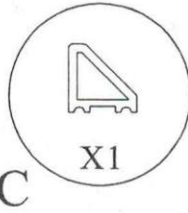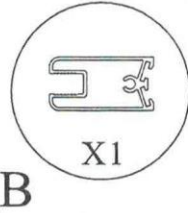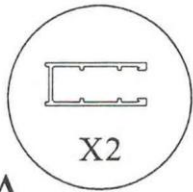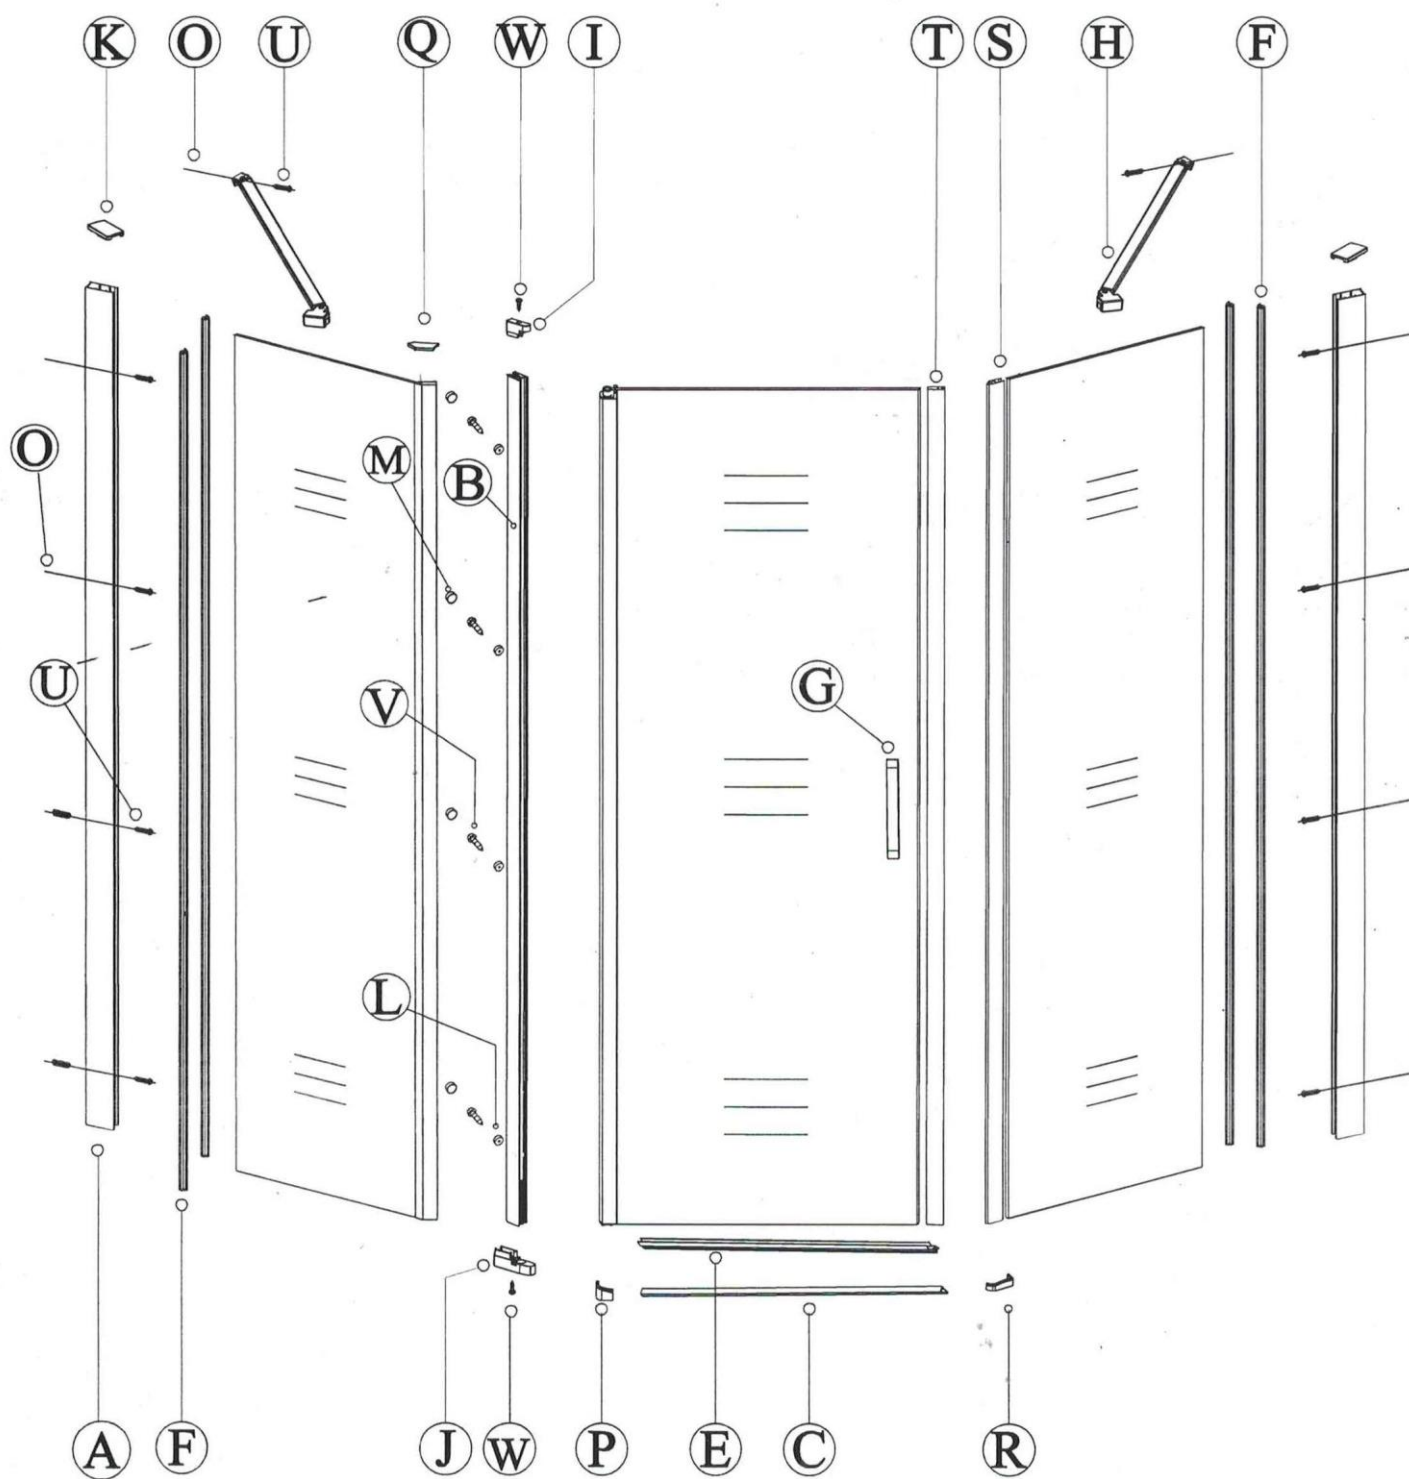 

1

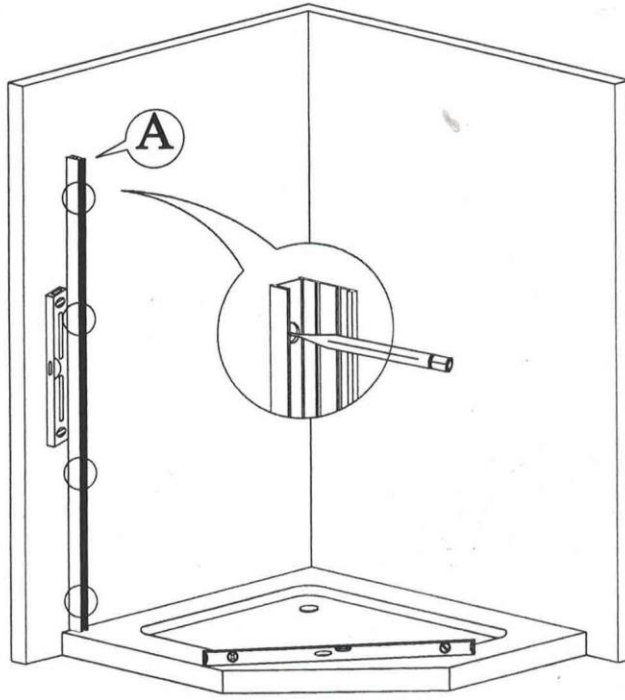 


2

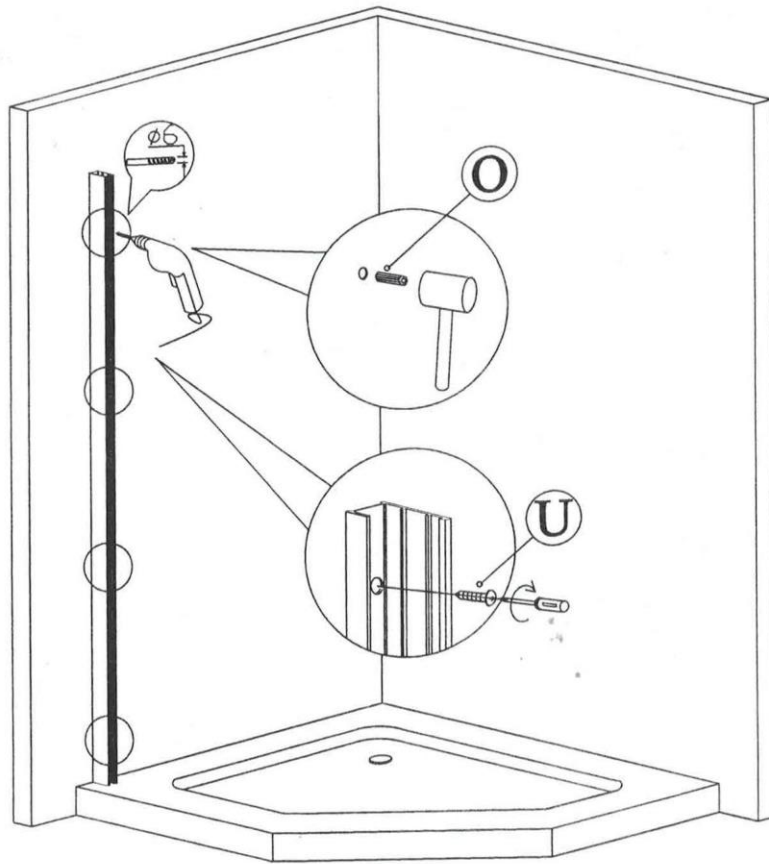 


(3)

 3

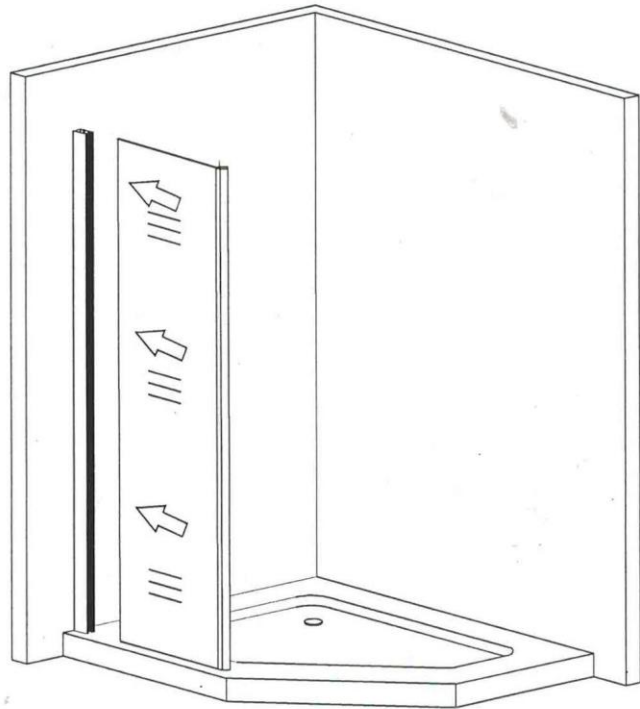


4

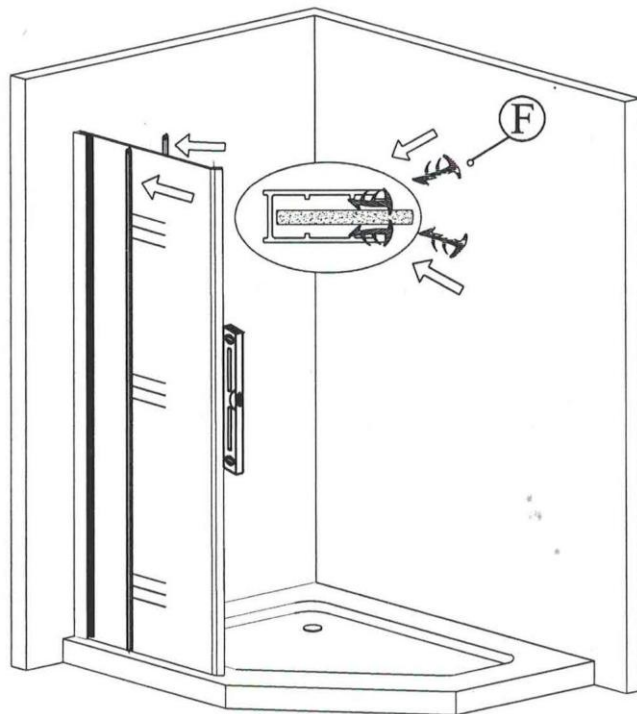 


(4)


 
5

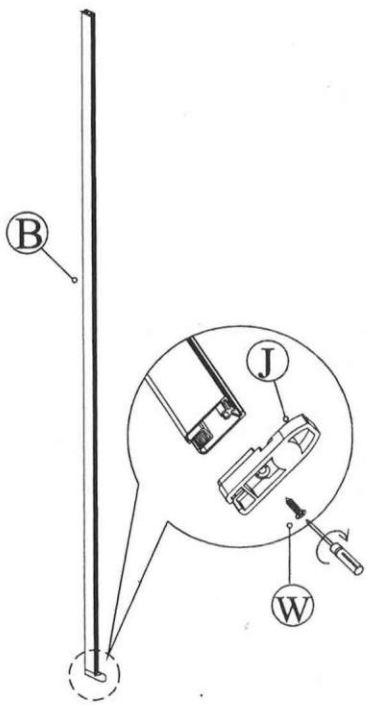

6

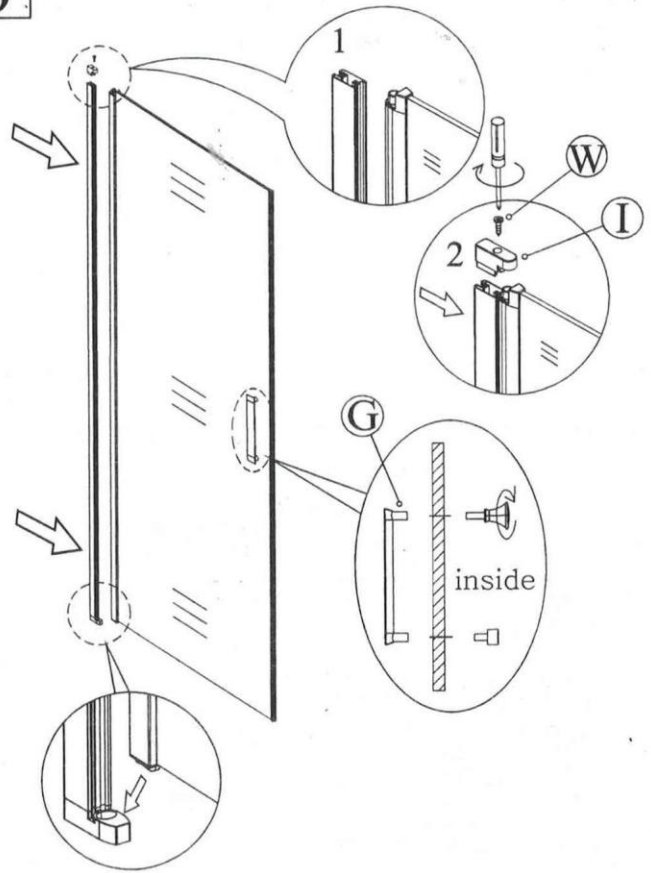 


7

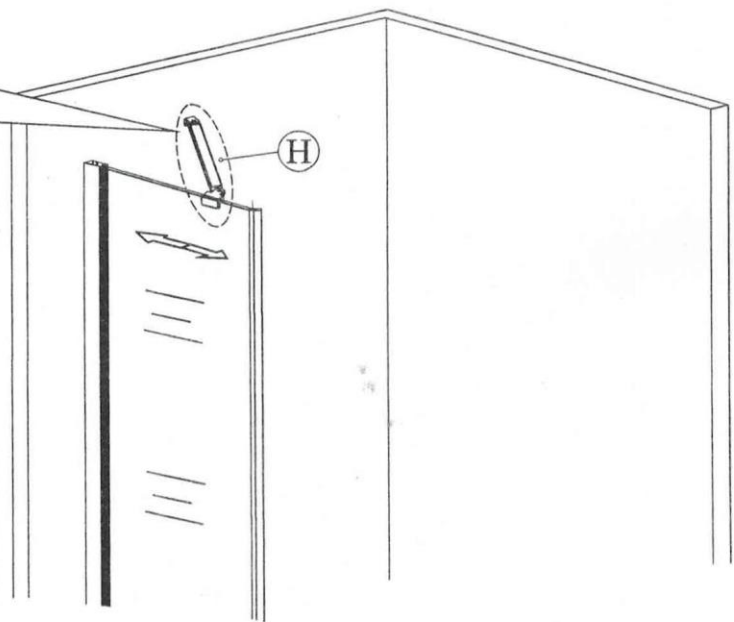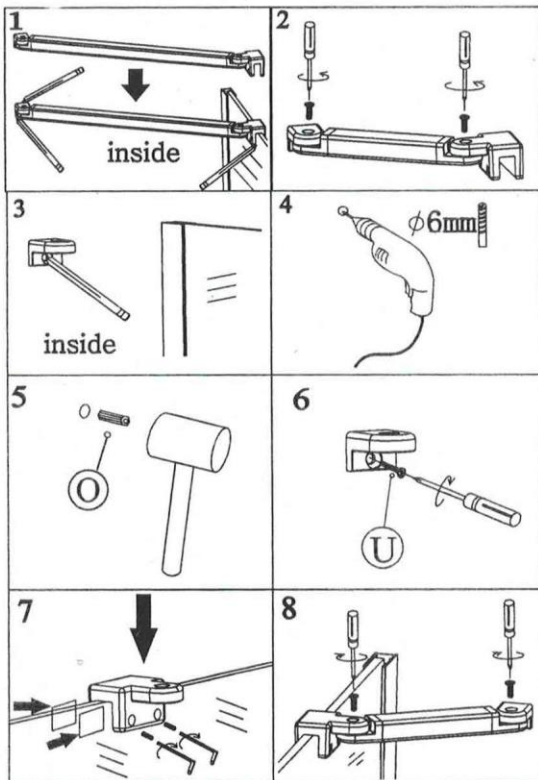  


(5)

 8

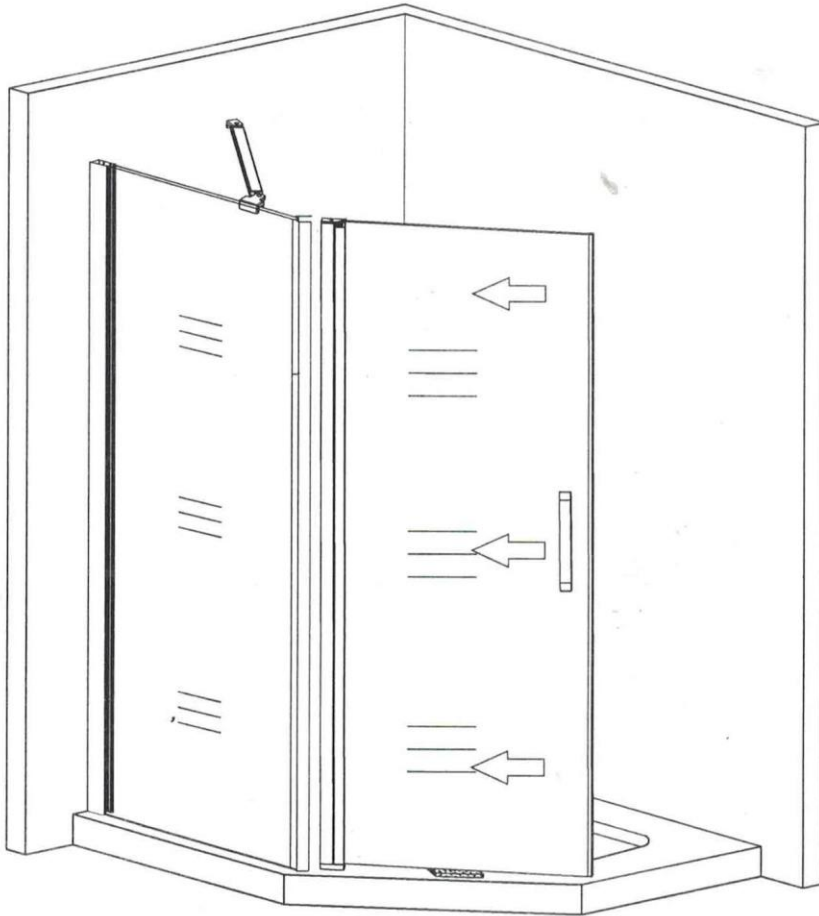


9

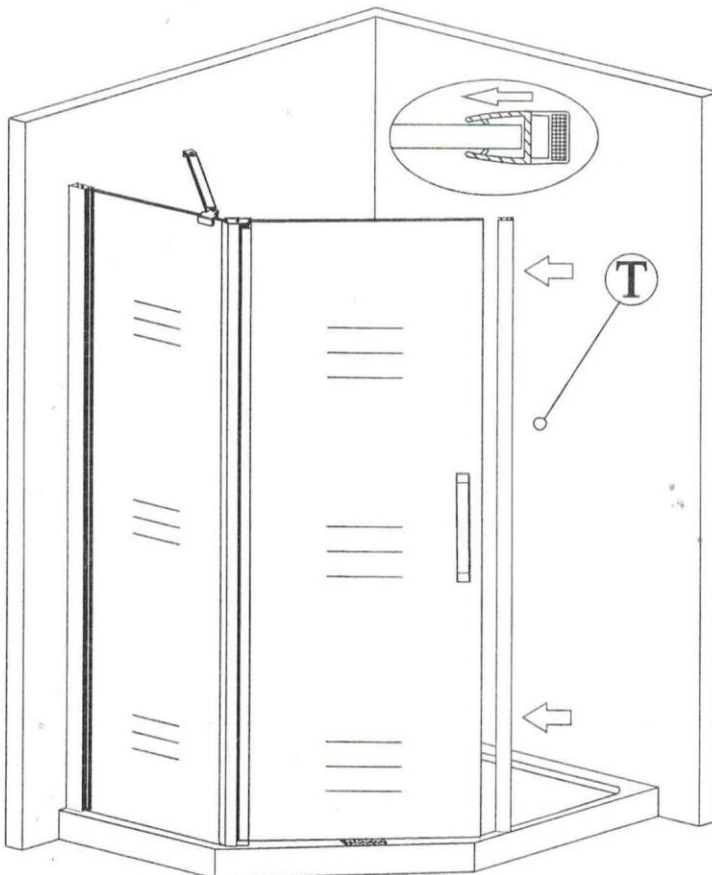 


(6)

 10

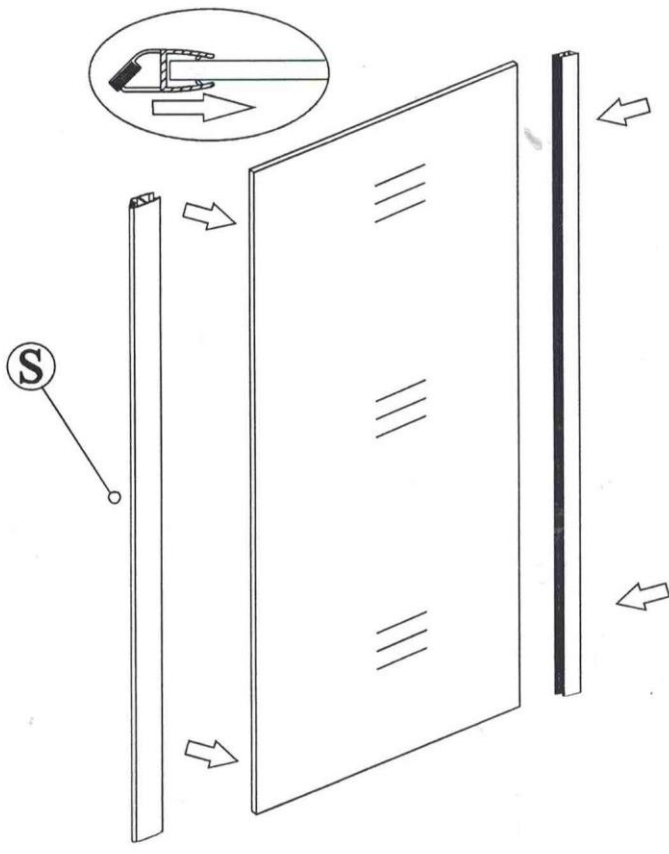


11

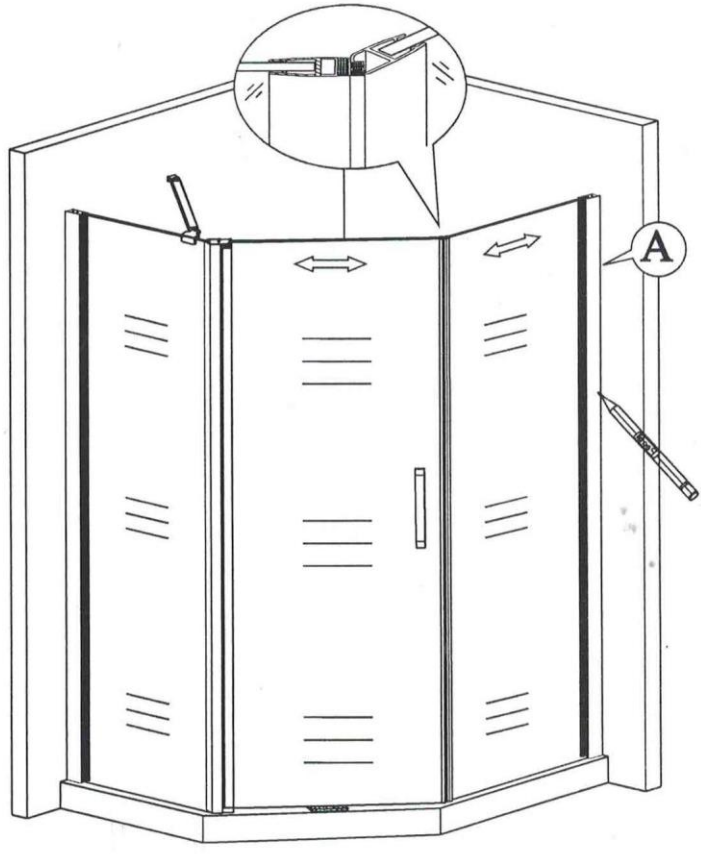 


(7)

 12

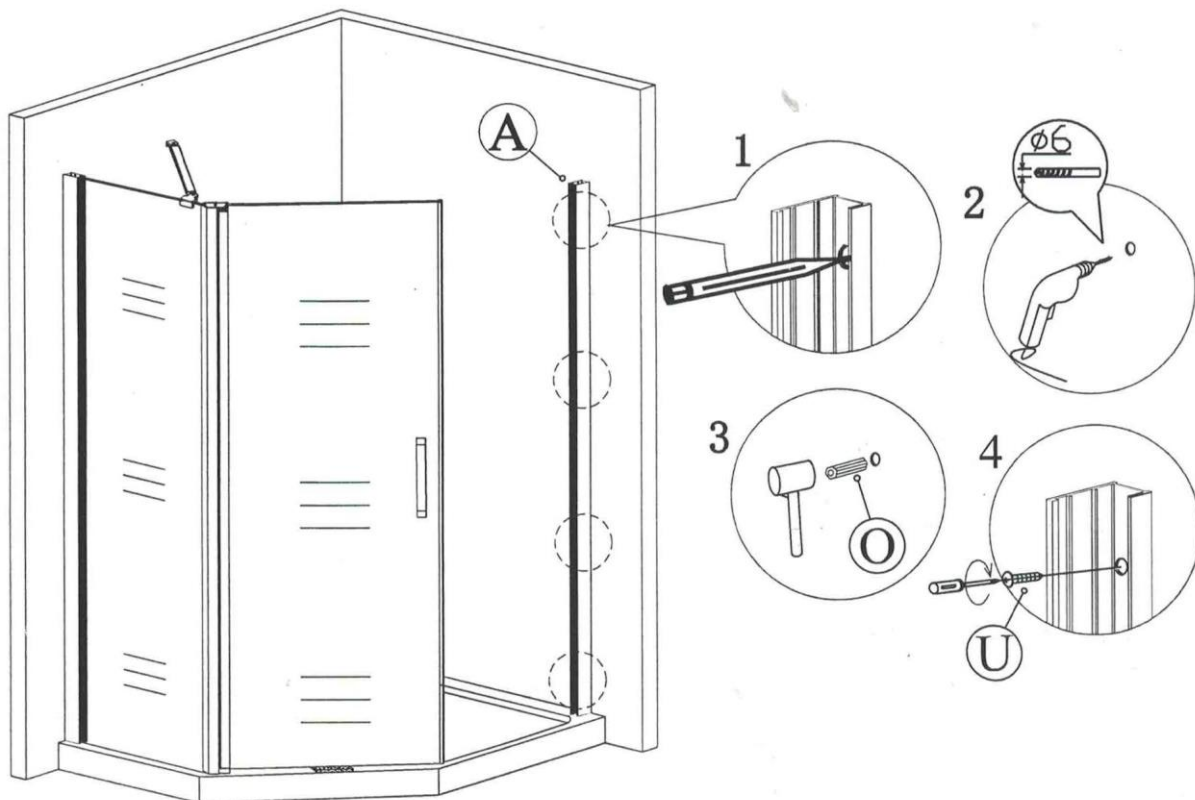


13

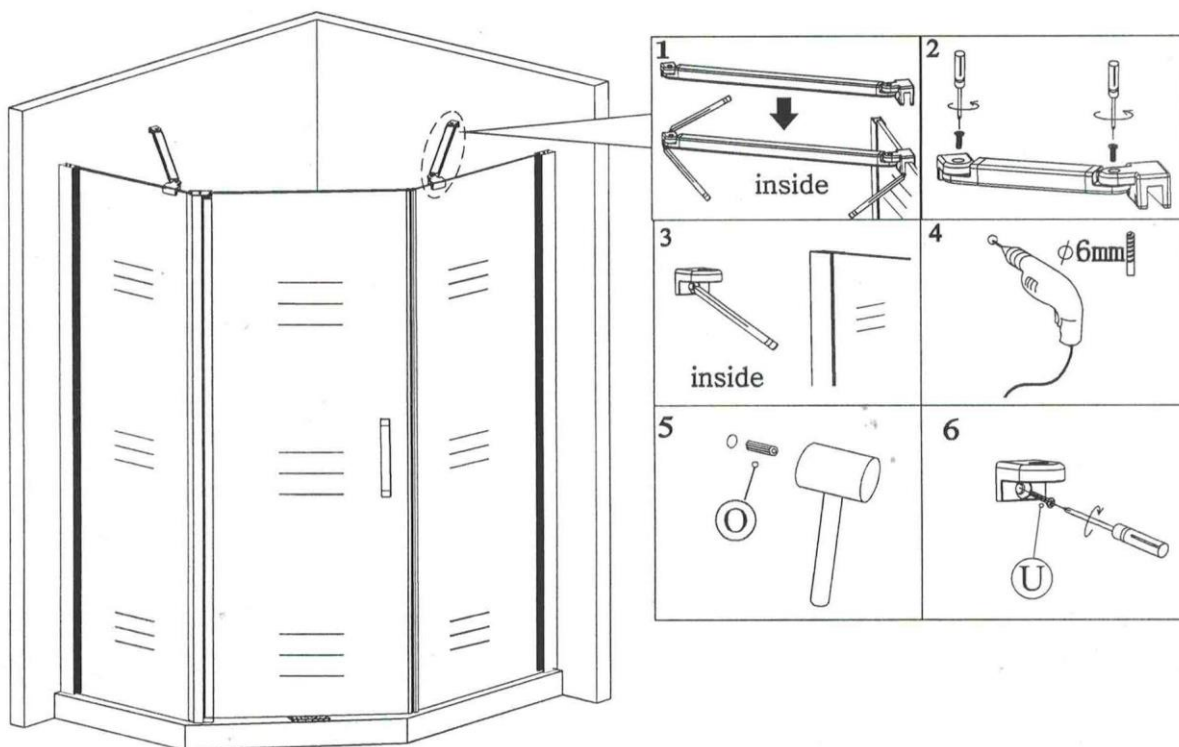 


(8)

 14

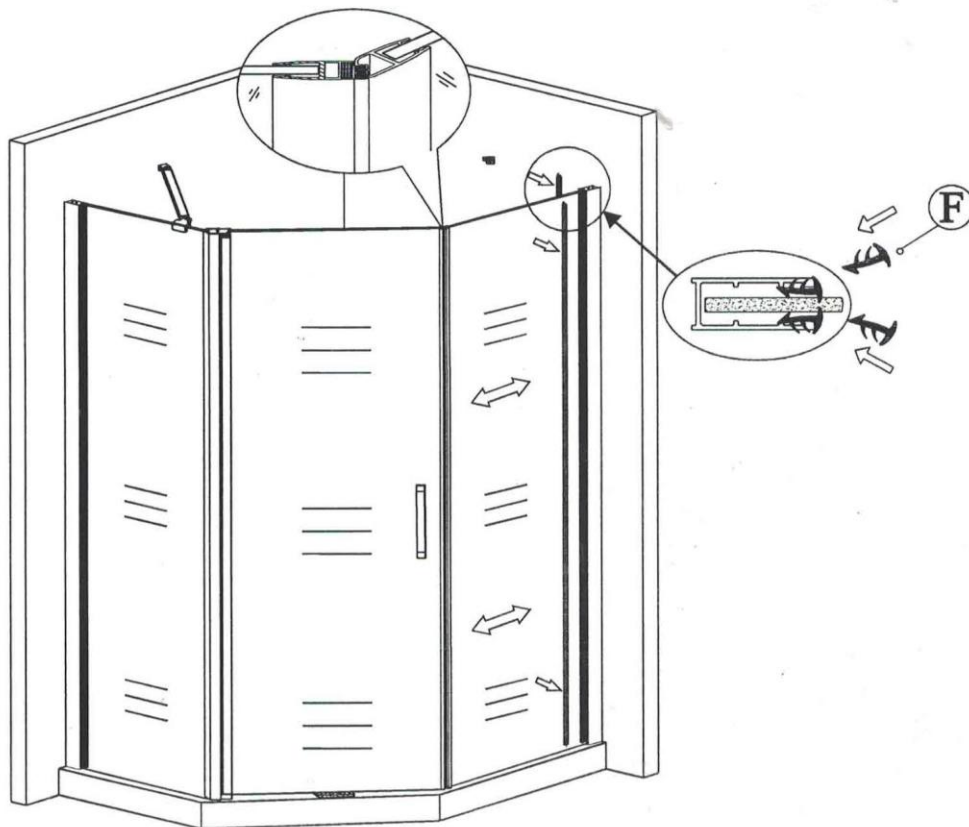


15

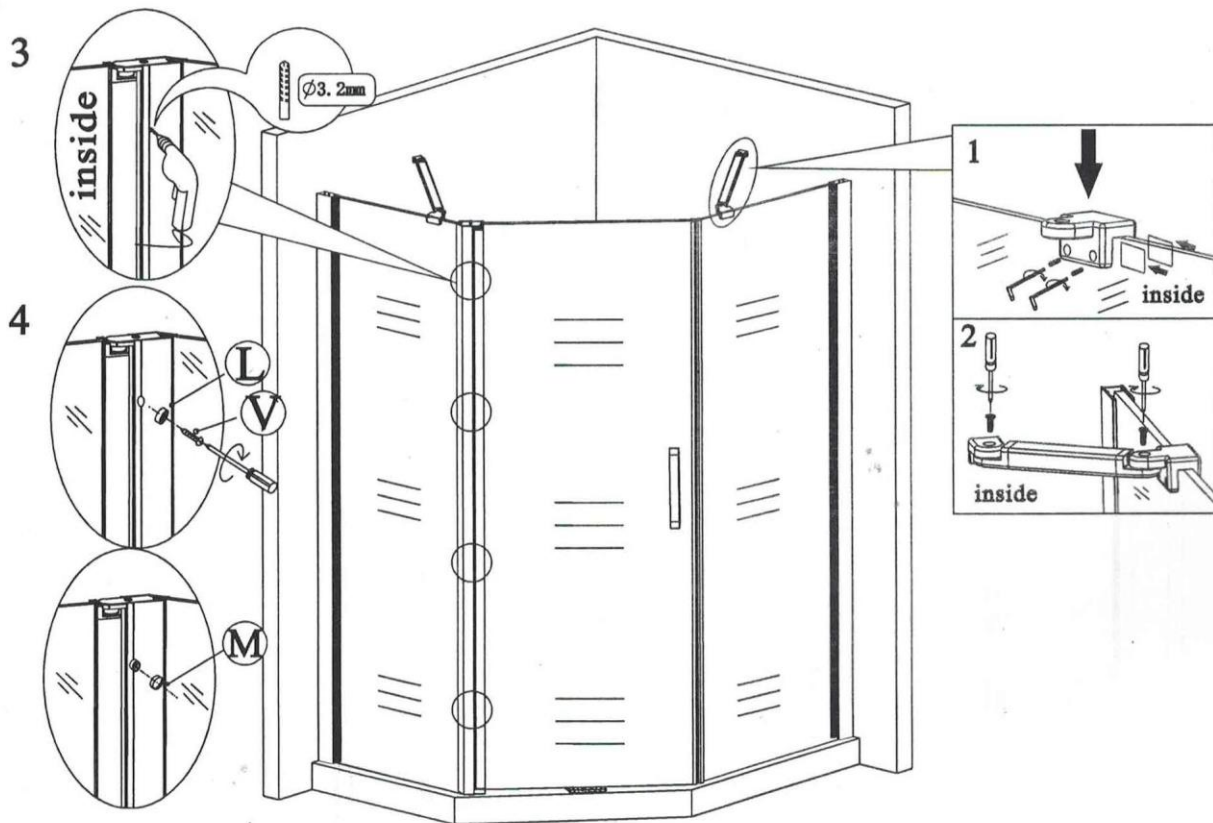 


(9)

 16

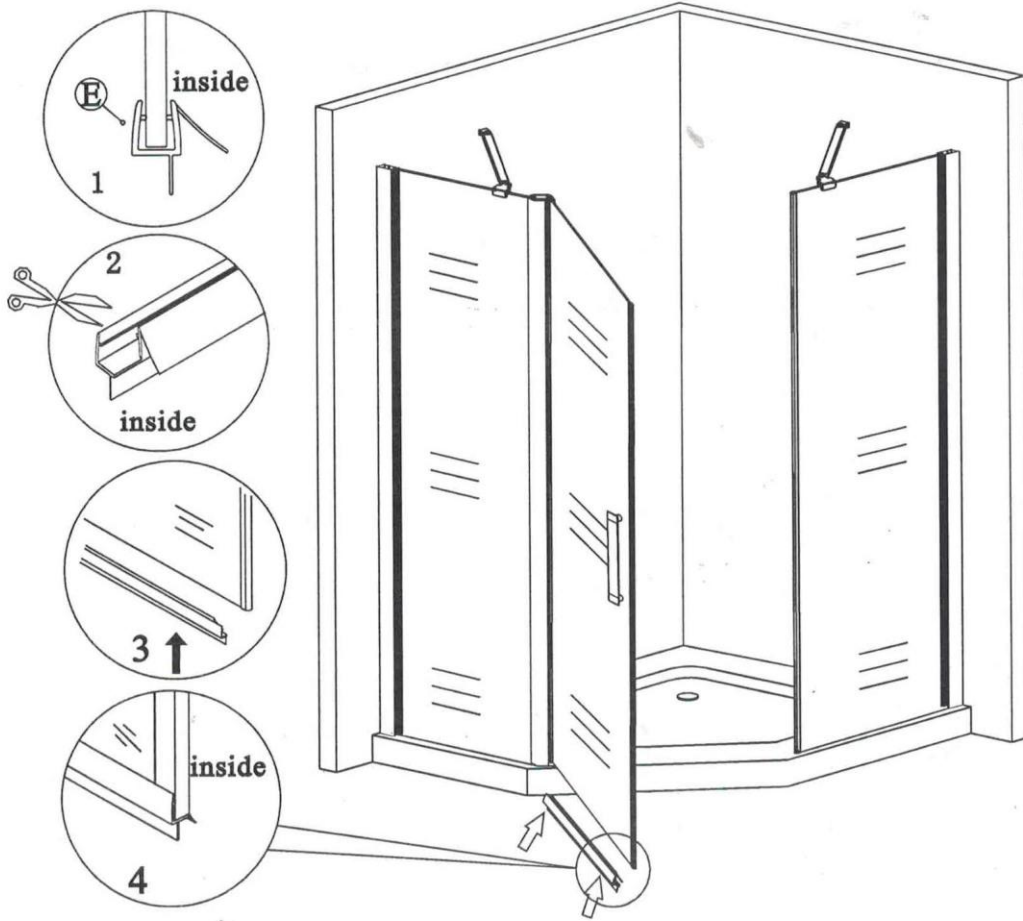

17

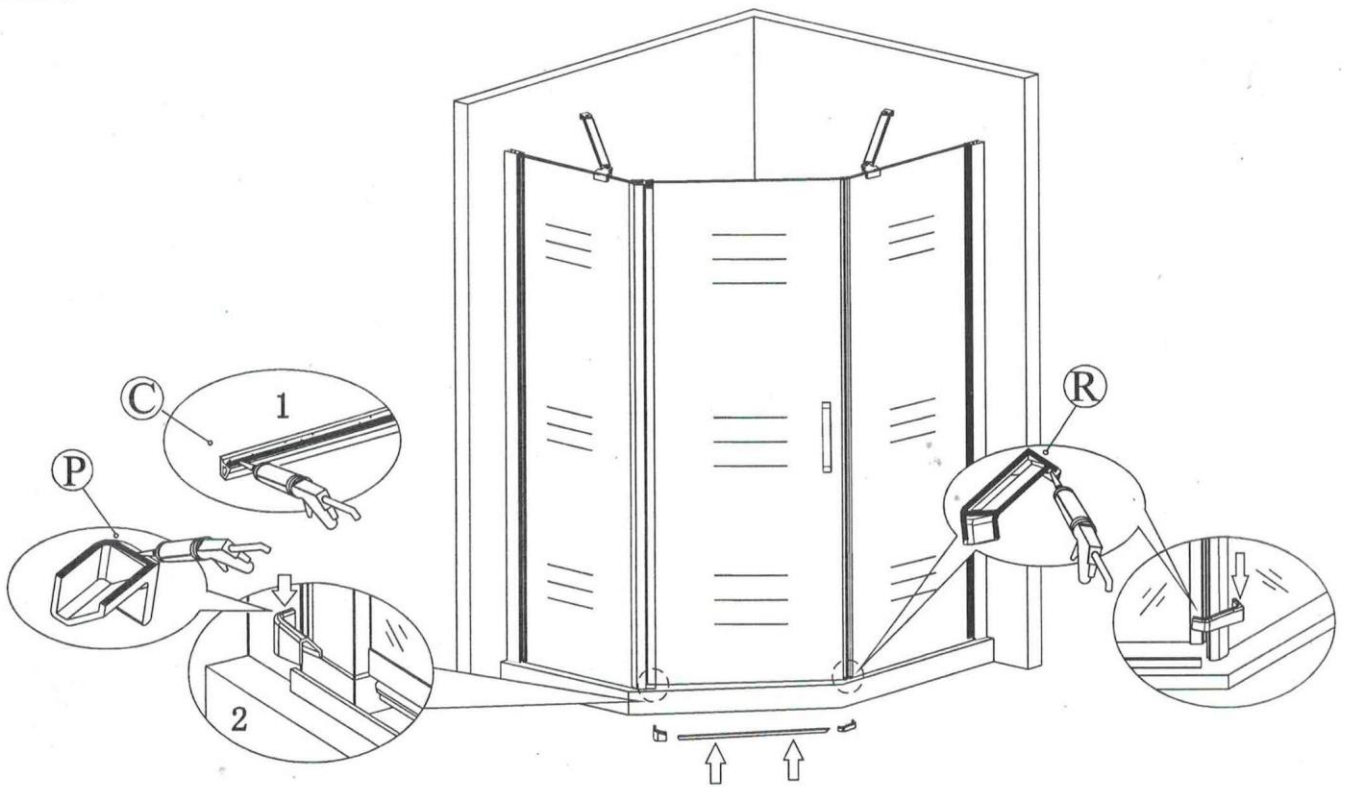 

(10)

18

